


1. Identification / recognition

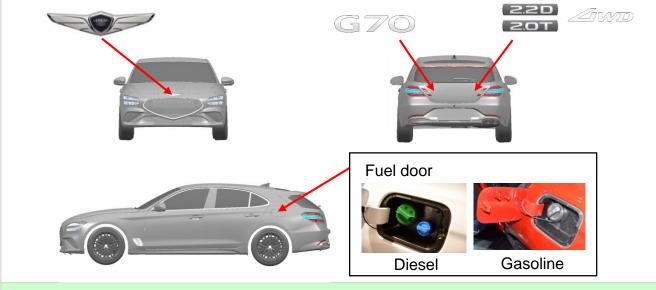

2. Immobilisation / stabilisation / lifting

 
Immobilisation




1. Chock the wheels and pull the switch to set the parking brake.



2. For automatic transmission vehicles, shift into park (P) gear.





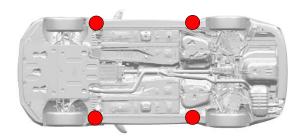

3. Disable direct hazards / safety regulations

Access to the battery



1. Press and hold the tailgate open button located on the instrument panel to open the power tailgate.





1. Press the tailgate open button located outside the tailgate while carrying the smart key to open the power tailgate.



 
Side glazing:



2-1. To access the battery, remove luggage boarder. 2-2. Remove luggage center tray or temporary tire.

- Disabling procedure
- 1) Switch off the ignition
- 2) Disconnect the negative terminal (-)
- 3) Disconnect the positive terminal (+)

4. Access to the occupants



Glass

Side glazing:

- Tempered (Standard)


- Laminated (Optional)


Steering column adjustment Manual adjustment

Power adjustment




Vehicle Body Hardened Steel:

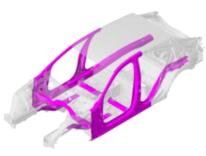

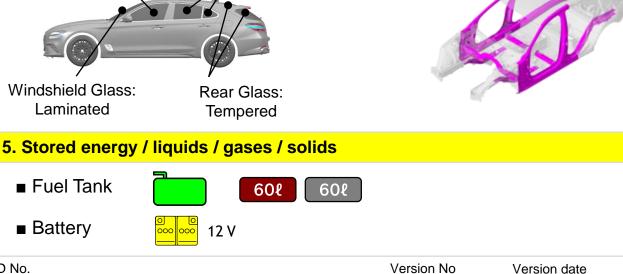

Tempered (Standard)

 
- Gas Strut
- ➔ Risk of missile effect



- Pedestrian protection active system
- ➔ Pyrotechnical actuators



 8. Towing / transportation / storage



Notice: AWD (All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using dollies.

Not OK :





Notice : Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.