


### 1. Identification / recognition

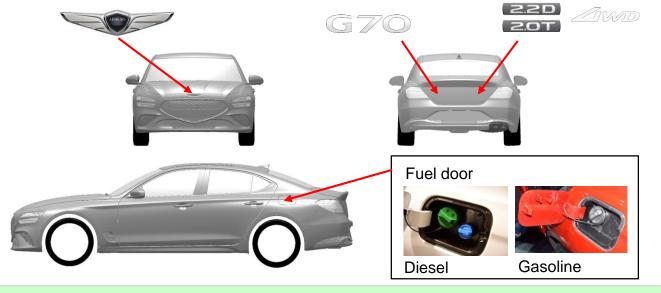

# 2. Immobilisation / stabilisation / lifting

# Immobilisation





1. Chock the wheels and pull the switch to set the parking brake.



2. For automatic transmission vehicles, shift into park (P) gear.

• Lifting positions at car underbody:

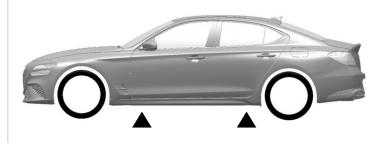

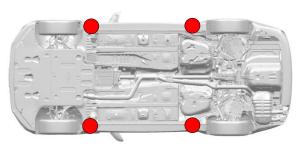

#### 3. Disable direct hazards / safety regulations

Access to the battery



1. Press and hold the tailgate open button located on the instrument panel to open the power tailgate.



1. Press the tailgate open button located outside the tailgate while carrying the smart key to open the power tailgate.



2-1. To access the battery, remove luggage boarder.2-2. Remove luggage center tray or temporary tire.

- Disabling procedure
  - 1) Switch off the ignition
  - 2) Disconnect the negative terminal (-)
  - 3) Disconnect the positive terminal (+)

### 4. Access to the occupants

 
Seat adjustment

Glass


Side glazing:

Steering column adjustment
Manual adjustment
Powe

Power adjustment




Vehicle Body Hardened Steel:

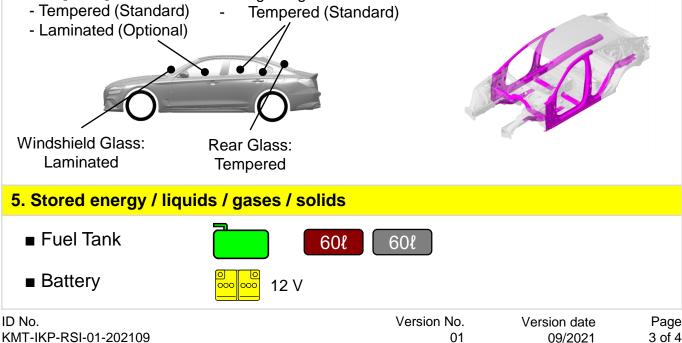


Side glazing:

- Gas Strut
- ➔ Risk of missile effect

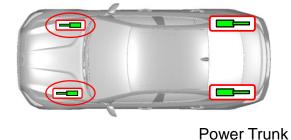


- Pedestrian protection active system
- ➔ Pyrotechnical actuators

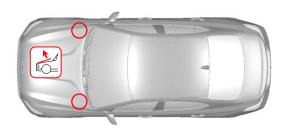

Trunk (Coil spring system) → optional

#### 8. Towing / transportation / storage

 

Notice: AWD (All Wheel Drive) vehicle must be towed with all wheels off the ground, either on a flatbed tow truck or using dollies.

Not OK:



Notice : Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.