G70 2.0LT SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------------|-----------------------|-----------------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | | • | | • | |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | | • | | • | |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | • | | • | • | • |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | • | | • | |
| Inspect fuel lines, fuel hoses and connections | | • | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Replace Spark Plugs | Every 84 Months / 70,000 km | | | | |
| Replace differential oil with LSD | | | Every 72 Months / 60,000 km | 1 | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

G70 3.3LT SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------|-----------------------|-----------------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | | • | | • | |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | | • | | • | |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | • | | • | • | • |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | • | | • | |
| Inspect fuel lines, fuel hoses and connections | | • | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Replace Spark Plugs | | | Every 84 Months / 70,000 kr | n | |
| Replace differential oil with LSD | | | Every 72 Months / 60,000 km | 1 | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

G80 EV SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 2 | SERVICE 1 |
|--|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 12,000 KM | 24 MONTHS / 24,000 KM | 36 MONTHS / 36,000 KM | 48 MONTHS / 48,000 KM | 60 MONTHS / 60,000 KM |
| Inspect and lubricate all latches, hinges and locks | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Check 12V battery condition and terminals | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect brake pedal free play | • | • | • | • | • |
| Inspect disc brakes/pads and tire rotation | | • | | • | |
| Inspect brake lines, hoses and connections | | • | | • | |
| Inspect cooling system hoses and connections | • | • | • | • | • |
| Inspect parking brake | | • | | • | |
| Inspect air conditioning compressor function | | • | | • | |
| Inspect air conditioning refrigerant for leaks | | • | | • | |
| Inspect suspension mounting bolts | | • | | • | |
| Inspect brake fluid | | • | | • | |
| Cabin air filter | | • | | • | |
| Service front/rear brakes (including parking brakes and tire rotation) | | • | | • | |

| ADD ON ITEM (NOT INCLUDED IN MAINTENANCE PACKAGE) | |
|---|-------------------------------------|
| Standard coolant | Replace at 200,000 km / 120 months |
| Low Conductivity Coolant (LCW) | Replace every 60,000 km / 36 months |
| Brake fluid | Replace every 48,000 km / 48 months |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 2, 1, 2, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

G80 2.5L SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------|-----------------------|----------------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | • | • | • | • | • |
| Inspect exhaust pipes and muffler | | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | • | • | • | | • |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | | • | | • | |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | | | • | |
| Inspect fuel lines, fuel hoses and connections | | | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Replace Spark Plugs | | | Every 84 Months / 70,000kr | n | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

G80 3.5L SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------|-----------------------|----------------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | • | • | • | • | • |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | • | • | • | | • |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | | • | | • | |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | | | • | |
| Inspect fuel lines, fuel hoses and connections | | | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Replace Spark Plugs | | | Every 84 Months / 70,000kn | n | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

G90 3.5T SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Inspect engine air filter | | • | | | |
| Replace engine air filter | | | | • | |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes, pads, and caliper (includes tire rotation) | • | • | • | | • |
| Inspect parking brake | | • | | • | |
| Inspect and lubricate all latches, hinges and locks | | • | | • | |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes (includes tire rotation) | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | | | • | |
| Inspect fuel lines, fuel hoses and connections | | | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Inspect fluid levels (coolant, washer) | • | • | • | • | • |

| ADD ON ITEM (NOT INCLUDED IN MAINTENANCE PACKAGE) | |
|---|---|
| Engine coolant | At first replace at 200,000 km /120 months. After that, replace every 40,000 km / 24 months |
| Spark plugs | Replace every 70,000 km |
| MHEV belt | Inspect every 10,000k km / 12 months. Replace every 100,000 km / 48 months |
| Brake Fluid | Replace every 40,000 km / 48 months |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

GV60 EV SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 2 | SERVICE 1 |
|--|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 12,000 KM | 24 MONTHS / 24,000 KM | 36 MONTHS / 36,000 KM | 48 MONTHS / 48,000 KM | 60 MONTHS / 60,000 KM |
| Inspect and lubricate all latches, hinges and locks | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Check 12V battery condition and terminals | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect brake pedal free play | • | • | • | • | • |
| Inspect disc brakes/pads and tire rotation | • | | • | | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect cooling system hoses and connections | • | • | • | • | • |
| Inspect air conditioning compressor function | • | • | • | • | • |
| Inspect air conditioning refrigerant for leaks | • | • | • | • | • |
| Inspect suspension mounting bolts | | • | | • | |
| Inspect brake fluid | • | • | • | • | • |
| Cabin air filter | | • | | • | |
| Service front/rear brakes (including parking brakes and tire rotation) | | • | | • | |

| ADD ON ITEM (NOT INCLUDED IN MAINTENANCE PACKAGE) | |
|---|--|
| Standard coolant | Replace at 200,000 km / 120 months. After that replace every 40,000 km / 24 months |
| Brake fluid | Replace every 48,000 km / 48 months |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 2, 1, 2, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

GV70 EV SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 2 | SERVICE 1 |
|--|-----------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 12,000 KM | 24 MONTHS / 24,000 KM | 36 MONTHS / 36,000 KM | 48 MONTHS / 48,000 KM | 60 MONTHS / 60,000 KM |
| Inspect and lubricate all latches, hinges and locks | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Check 12V battery condition and terminals | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect brake pedal free play | • | • | • | • | • |
| Inspect disc brakes/pads and tire rotation | • | | • | | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect cooling system hoses and connections | • | • | • | • | • |
| Inspect air conditioning compressor function | • | • | • | • | • |
| Inspect air conditioning refrigerant for leaks | • | • | • | • | • |
| Inspect suspension mounting bolts | | • | | • | |
| Inspect brake fluid | • | • | • | • | • |
| Cabin air filter | | • | | • | |
| Service front/rear brakes (including parking brakes and tire rotation) | | • | | • | |

| ADD ON ITEM (NOT INCLUDED IN MAINTENANCE PACKAGE) | |
|---|--|
| Brake fluid | Replace every 48,000 km / 48 months |
| Standard coolant | Replace at 200,000 km / 120 months; After that replace every 40,000 km / 24 months |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 2, 1, 2, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

GV70 2.5L SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Replace cabin air filter | | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | • | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | | • | | • | |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | • | • | | • | |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | • | | • | • | • |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect fuel lines, fuel hoses and connections | | • | | • | |
| Inspect front/rear differential oil (AWD) | Every 72 Months / 60,000 km | | | | |
| Replace Spark Plugs | Every 84 Months / 70,000 km | | | | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

GV70 3.5L SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 | |
|---|-----------------------------|-----------------------|-----------------------|-----------------------|-----------------------|--|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM | |
| Replace engine oil and filter | • | • | • | • | • | |
| Check fluid levels (coolant and washer) | • | • | • | • | • | |
| Inspect driveshafts and boots | • | • | • | • | • | |
| Inspect exterior lights | | • | • | • | • | |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • | |
| Inspect tire pressure | • | • | • | • | • | |
| Inspect propeller shaft | • | • | • | • | • | |
| Rotate tires | • | • | • | • | • | |
| Fuel injector cleaner | • | • | • | • | • | |
| Replace cabin air filter | • | • | • | • | • | |
| Check battery condition and terminals | • | • | • | • | • | |
| Inspect brake/clutch (if equipped) fluid | | • | | • | | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • | |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • | |
| Inspect vaccum hose | • | • | • | • | • | |
| Inspect brake lines, hoses and connections | • | • | • | • | • | |
| Inspect engine air filter | | • | | • | | |
| Inspect exhaust pipes and muffler | • | • | • | • | • | |
| Inspect suspension mounting bolts | • | • | • | • | • | |
| Inspect disc brakes/pads | | • | | • | | |
| Inspect parking brake | | • | | • | | |
| Replace engine air filter | | | | • | | |
| Inspect and lubricate all latches, hinges and locks | • | | • | • | • | |
| Inspect fuel filler cap and fuel tank | | • | | • | | |
| Service front and rear brakes | | | | • | | |
| Inspect vapor hose | | • | | • | | |
| Inspect fuel lines, fuel hoses and connections | | • | | • | | |
| Inspect front/rear differential oil (AWD) | Every 72 Months / 60,000 km | | | | | |
| Replace Spark Plugs | Every 84 Months / 70,000 km | | | | | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

GV80 2.5L T SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | | • | • | • | • |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | | • | | • | |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | | • | | • | |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | • | | • | • | • |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | • | | • | |
| Inspect fuel lines, fuel hoses and connections | | • | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Replace Spark Plugs | Every 84 Months / 70,000 km | | | | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.

GV80 3.5L SERVICE MAINTENANCE SCHEDULE



| | SERVICE 1 | SERVICE 2 | SERVICE 1 | SERVICE 3 | SERVICE 1 |
|---|-----------------------------|-----------------------|-----------------------|-----------------------|-----------------------|
| SERVICE DESCRIPTION | 12 MONTHS / 10,000 KM | 24 MONTHS / 20,000 KM | 36 MONTHS / 30,000 KM | 48 MONTHS / 40,000 KM | 60 MONTHS / 50,000 KM |
| Replace engine oil and filter | • | • | • | • | • |
| Check fluid levels (coolant and washer) | • | • | • | • | • |
| Inspect driveshafts and boots | • | • | • | • | • |
| Inspect exterior lights | • | • | • | • | • |
| Inspect steering gear box, linkages and boots/ball joints | • | • | • | • | • |
| Inspect tire pressure | • | • | • | • | • |
| Inspect propeller shaft (AWD/RWD) | • | • | • | • | • |
| Rotate tires | • | • | • | • | • |
| Fuel injector cleaner | • | • | • | • | • |
| Replace cabin air filter | • | • | • | • | • |
| Check battery condition and terminals | • | • | • | • | • |
| Inspect brake/clutch (if equipped) fluid | | • | | • | |
| Inspect air conditioning refrigerant for any leaks | • | • | • | • | • |
| Inspect air conditioning compressor for any leaks | • | • | • | • | • |
| Inspect vaccum hose | • | • | • | • | • |
| Inspect brake lines, hoses and connections | • | • | • | • | • |
| Inspect engine air filter | | • | | • | |
| Inspect exhaust pipes and muffler | • | • | • | • | • |
| Inspect suspension mounting bolts | • | • | • | • | • |
| Inspect disc brakes/pads | | • | | • | |
| Inspect parking brake | | • | | • | |
| Replace engine air filter | | | | • | |
| Inspect and lubricate all latches, hinges and locks | · | | • | • | • |
| Inspect fuel filler cap and fuel tank | | • | | • | |
| Service front and rear brakes | | | | • | |
| Inspect vapor hose | | • | | • | |
| Inspect canister | | • | | • | |
| Inspect fuel lines, fuel hoses and connections | | • | | • | |
| Inspect front/rear differential oil (AWD) | | | | • | |
| Replace Spark Plugs | Every 84 Months / 70,000 km | | | | |

^{*}Please note the service intervals continue in the following pattern: 1, 2, 1, 3, 1, 2, 1, 3, etc. until the vehicle reaches 60 months or 100,000 km, whichever occurs first.