




**Genesis GV70**  
SUV, 4 doors  
From March 2021

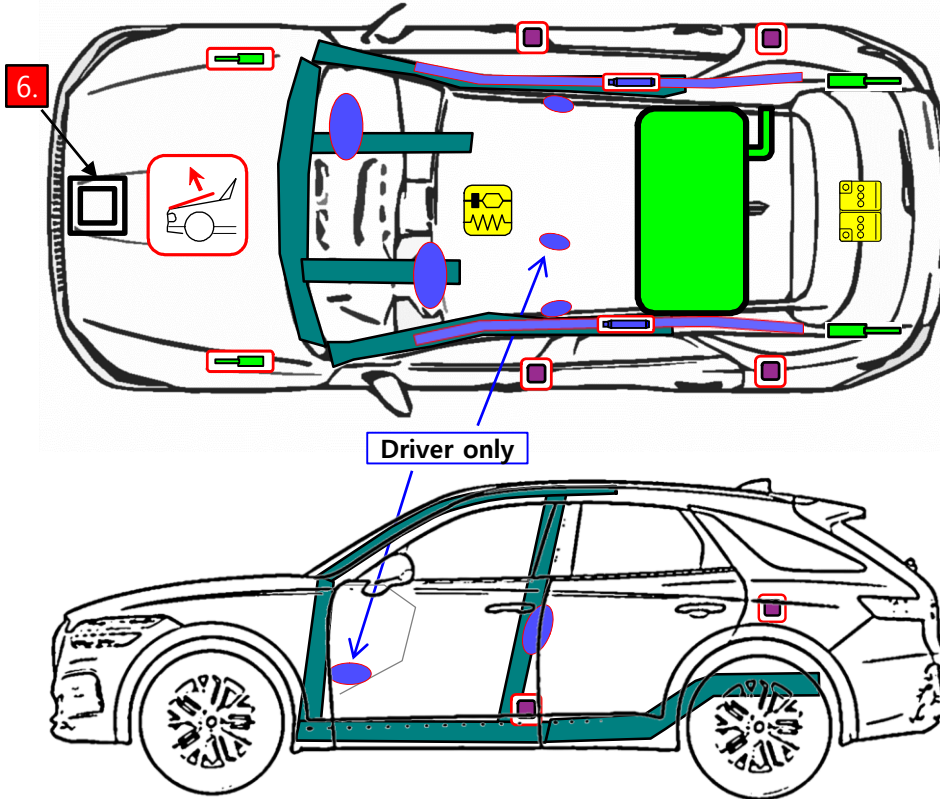

|  |                                      |  |                                    |  |                         |  |  |  |                                     |
|--|--------------------------------------|--|------------------------------------|--|-------------------------|--|--|--|-------------------------------------|
|  | Airbag                               |  | Stored gas inflator                |  | Seat belt pretensioner  |  | SRS control unit                       |  | Pedestrian protection active system |
|  | Automatic rollover protection system |  | Gas strut/Preloaded spring         |  | High strength zone      |  | Zone requiring special attention       |  |                                     |
|  | Battery low voltage                  |  | Ultra capacitor, low voltage       |  | Fuel tank               |  | Gas tank                               |  | Safety valve                        |
|  | High voltage battery pack            |  | High voltage power cable/component |  | High voltage disconnect |  | Fuse box disabling high voltage system |  | Ultra capacitor, high voltage       |

ID No.

KMT-JK1-RSI-01-202102

Version No.

01

Version date

02/2021

Page

1 of 4

# 1. Identification / recognition



# 2. Immobilisation / stabilisation / lifting

## ■ Immobilization




1. Chock the wheels and pull the switch to set the parking brake.



2. For automatic vehicles the shift lever to the park(P) position.


## ■ Lifting points under the vehicle : ■

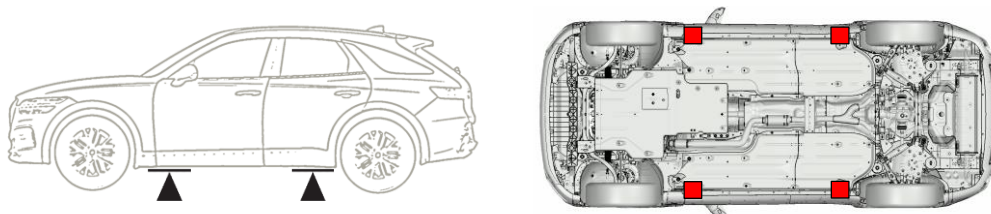



|  | ID No.                | Version No. | Version date | Page   |
|--|-----------------------|-------------|--------------|--------|
|  | KMT-JK1-RSI-01-202102 | 01          | 02/2021      | 2 of 4 |

### 3. Disable direct hazards / safety regulations

#### ■ Access to the battery

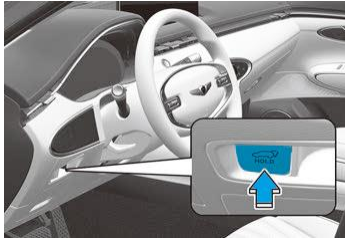

o  
r

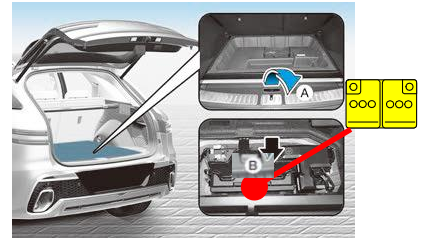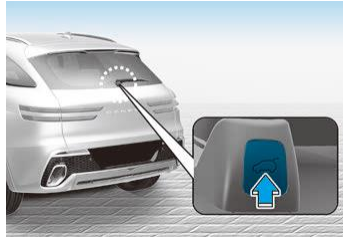

1. Press and hold the tailgate open button located on the instrument panel to open the power tailgate.

1. Press the tailgate open button located outside the tailgate while carrying the smart key to open the power tailgate.

2. To access the battery, remove the clip (A) and release the cover (B).

#### ■ Disabling procedure



① Turn the ignition switch off

② Disconnect the negative(-) terminal

③ Disconnect the positive(+) terminal

### 4. Access to the occupants

#### ■ Glass

1-2 : Laminated


3 : Tempered, Laminated(OPT)

4-5 : Tempered



#### ■ Vehicle body

Hardened Steel

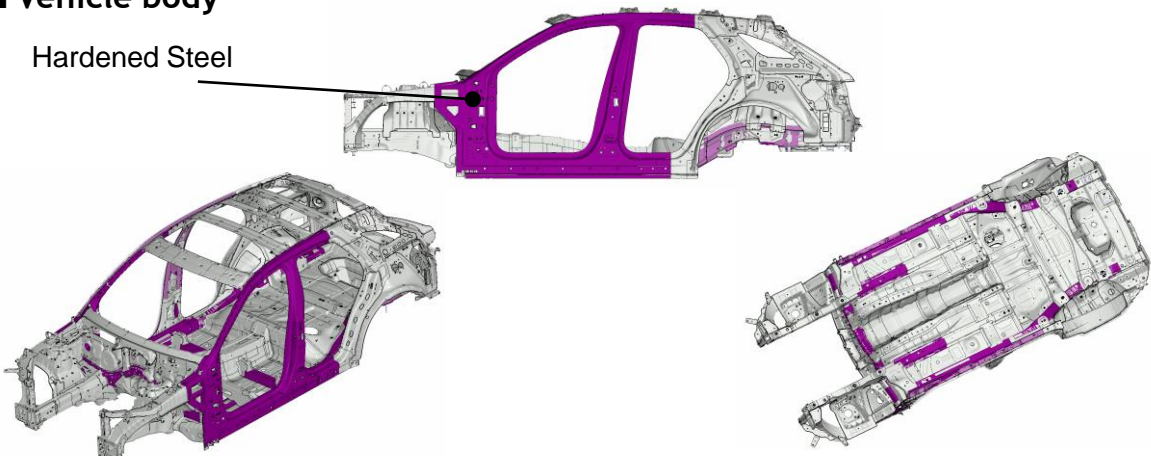

|  | ID No.                | Version No. | Version date | Page   |
|--|-----------------------|-------------|--------------|--------|
|  | KMT-JK1-RSI-01-202102 | 01          | 02/2021      | 3 of 4 |

## 5. Stored energy / liquids / gases / solids

■ Fuel Tank

66ℓ

66ℓ

■ Battery




12 V

## 6. In case of fire


■ Gas Strut

→ Risk of missile effect

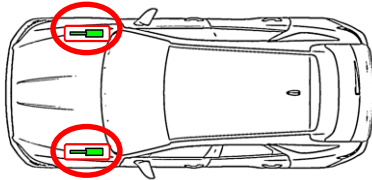



■ Pedestrian protection active system

→ Pyrotechnical actuator

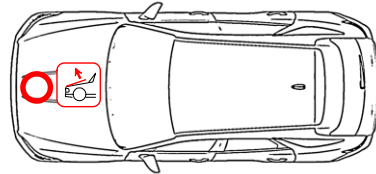

## 8. Towing / transportation / storage

OK :

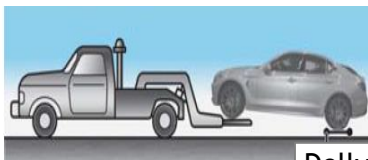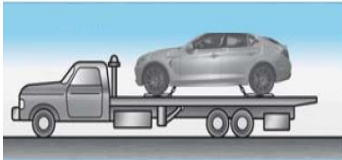

Dolly




Dolly

Notice :

A towed AWD (All Wheel Drive) vehicle must have all its wheels off the ground. Keep it on a flatbed tow truck or use dollies

Not OK :

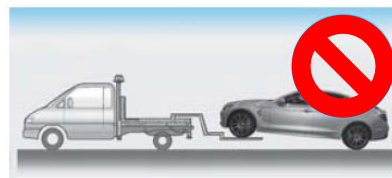

Notice :

Do not tow with sling-type equipment. Use a wheel lift or flatbed equipment. Do not tow the vehicle with the rear wheels on the ground as this may cause damage to the vehicle.

ID No.

KMT-JK1-RSI-01-202102

Version No.

01

Version date

02/2021

Page

4 of 4